

How to replace the door to glass sealing gasket

Step 1

You will need a screw driver and a craft knife



Step 2

Open door and unscrew the 4 screws holding the 2 brackets in place.

Remove the glass and existing gasket.




Step 3

Place the gasket together with the glass and place back on the door and screw the brackets back on holding the glass & gasket in place.



Step 4

Once you have screwed the brackets back in place to hold the glass and gasket it should look like this:

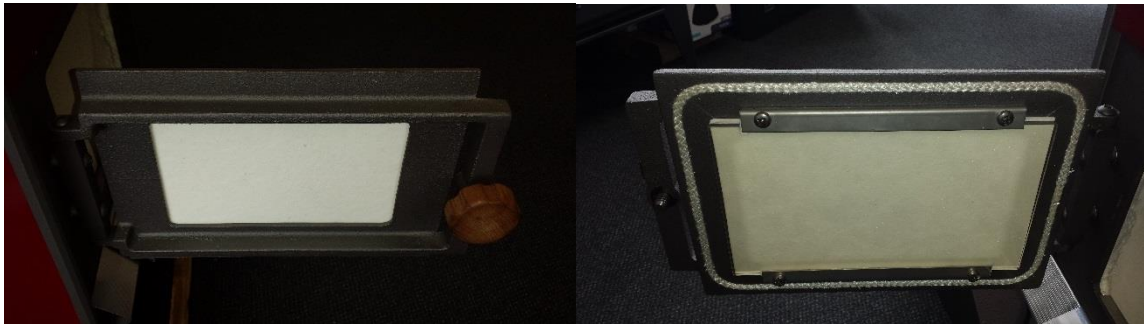

Step 5

Using a craft knife, cut around the edge from the outside as depicted in the picture below.



Once you have done this you should end up having the finished project looking like you started



Done!